

HOW TO USE



Checking the brake function

Before starting work, always check operation of the brake: To do this, lift, pull or tension and lower or release a load over a short distance with the unit. When the hand chain is released, the load must be held in any position. This check is intended to ensure that even at temperatures below 0 °C, the brake disks are not frozen. Repeat it at least twice, before starting further work.

Lifting the load

Pulling the hand chain in clockwise direction will raise the load.

Mitari Overload protection

The overload protection is set at approx. 125% - 140% x the workload. When the load limit is exceeded, the overload protection device is activated and prevents further lifting of the load, lowering is still possible.

Lowering the load

Pulling the hand chain in anticlockwise direction will lower the load.